




Assembling - Maintenance

This drawing is appendix A of the installation and maintenance instruction "Pneumatic Valve 2.0".
Complete installation and maintenance instruction refer to QR-Code or:
<https://www.allfi.com/en/services/downloads/product-manuals/>

- Pressure relief holes must not be covered or closed
- Pneumatic cylinder must not be pressurized during assembly & disassembly.

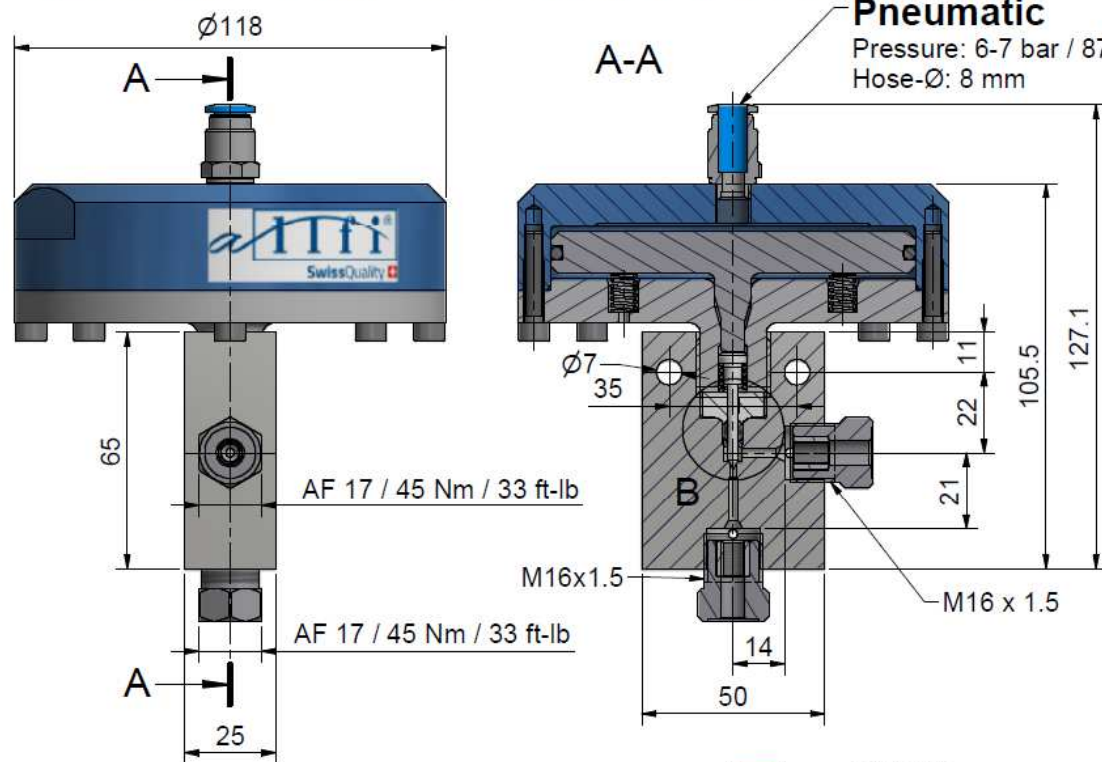

Detail B (2 : 1)

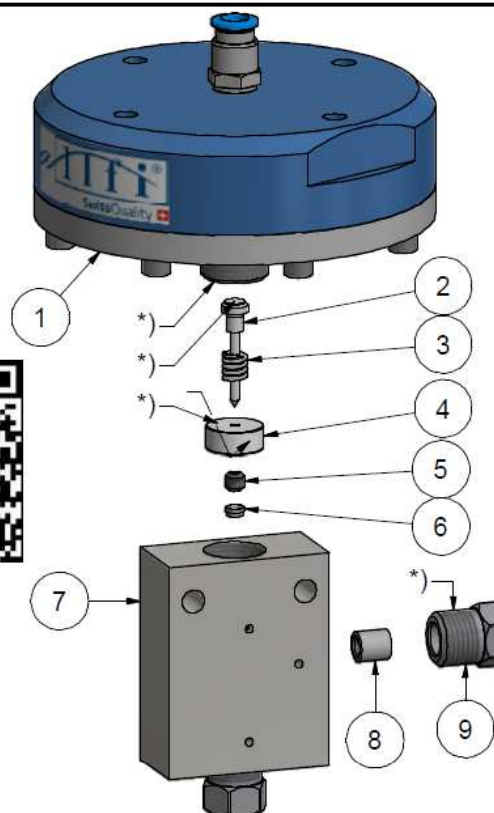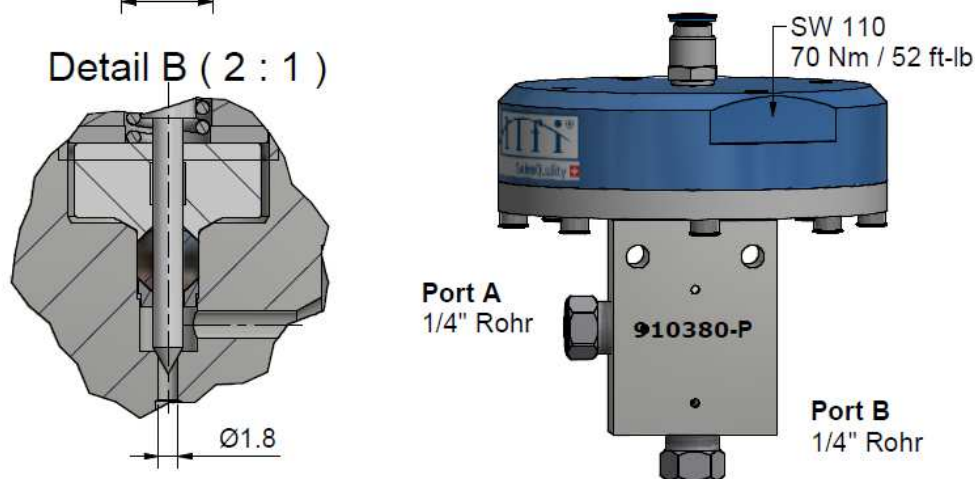

*) -> Assembly-Grease DX
Allfi-Art.: 051055

Sealing kit 2.0
912050-P
Including Pos.
2,3,4,5,6



Item	Qty	Description	Part-Number	Comments	Weight
1	1	Pneumatic Cylinder 2.0 NO	912290		2120.3 g
2	1	Needle complete 2.0	912076-P	Wear part	1.6 g
3	1	Spring	021033		0.1 g
4	1	Pressure plate 2.0	912053-P	Wear part	12.1 g
5	1	HP-Seal 2.0	912052-P	Wear part	0.6 g
6	1	Conical disc 2.0	912062-P	Wear part	0.2 g
7	1	Valve Body angle 1/4" 2.0	912063-P	Wear part	537.3 g
8	2	Collar 1/4"	711403		3.1 g
9	2	Gland Nut 1/4" 90.000psi	701403-P		27.9 g

General tolerances ISO 2768-1 m Designs and drawings created and produced by the contractor are the contractor's intellectual property and may only be used for the purposes of the order. Weight 2.73 kg

Amendment:	Replace for	-
	Replaced by	-
	Drawn	30.06.2022 AM
	Checked	06.07.2022 BT
	Release	16.12.2024 PH
	Index-release	

Pneum. Valve 2-Way Angle 1/4" NO 2.0

Scale
2 : 3



ALLFI AG - RIEDENMATT 1 - CH-6370 STANS
PHONE +41(0)41-618 05 05 - TELEFAX +41(0)41-618 05 10
E-MAIL: sales@allfi.com <http://www.allfi.com>

Max 6200 bar / 90,000 psi
Normally open

910380-P

Index	Sheet- No.	2
No. of sheets		2