




Assembling - Maintenance

This drawing is appendix A of the installation and maintenance instruction "Hand valve 2.0".
Complete installation and maintenance instruction refer to QR-Code or:
<https://www.allfi.com/en/services/downloads/product-manuals/>



- Pressure relief holes must not be covered or closed.



Detail B (3 : 2)

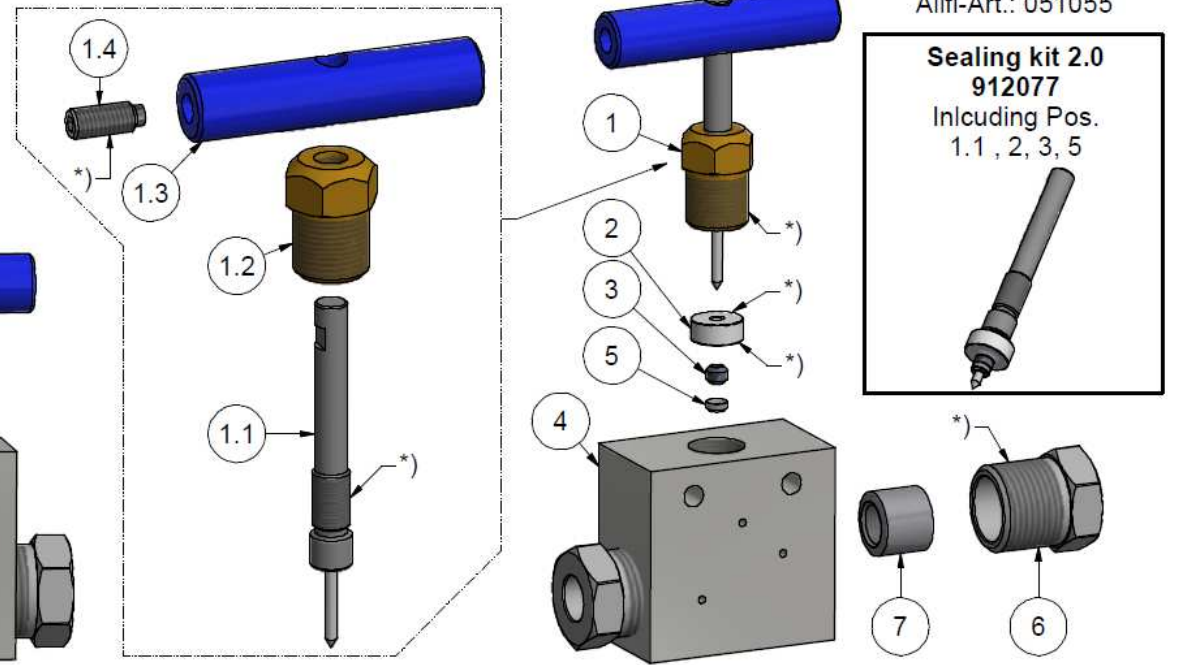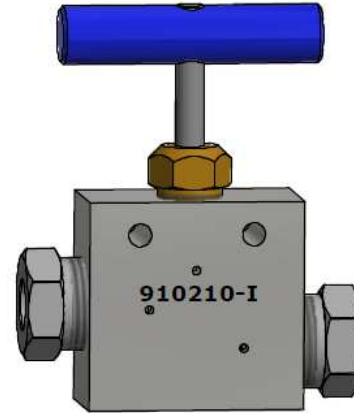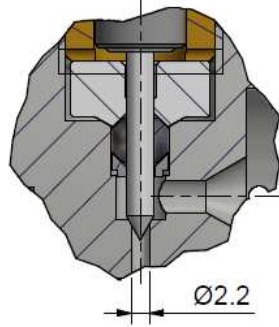

*) -> Assembly-Grease DX
Allfi-Art.: 051055

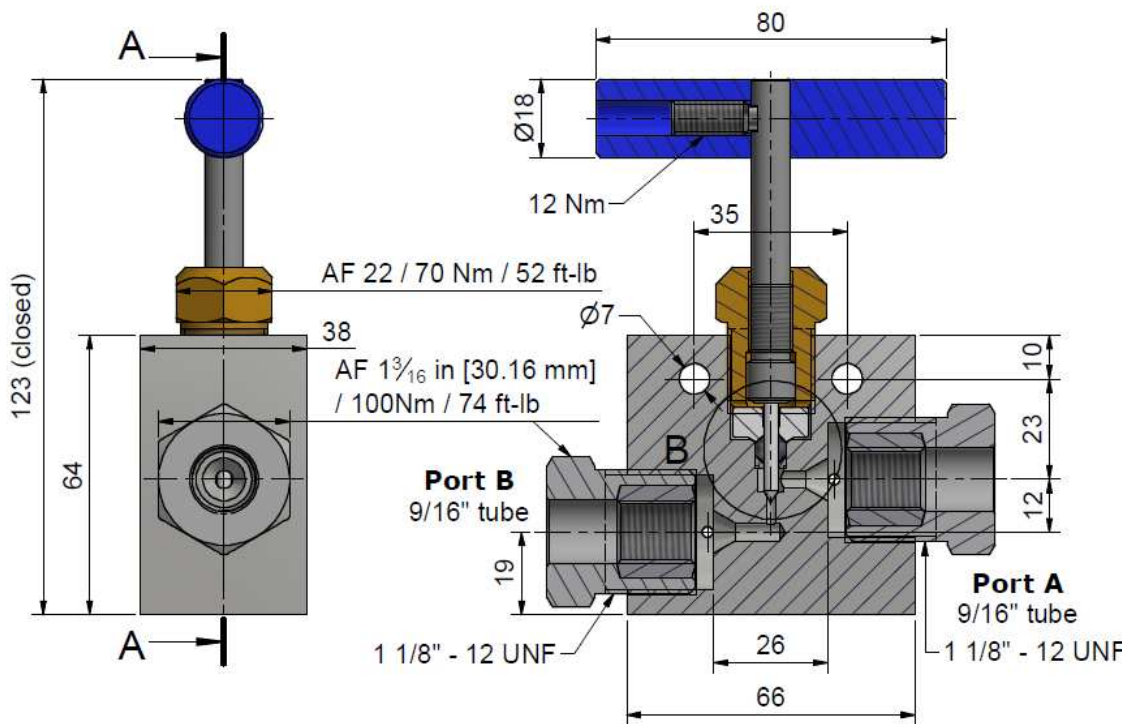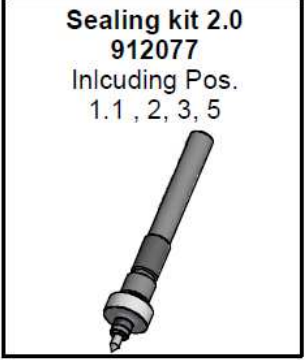

Item	Qty	Description	Part-Number	Characteristics	Weight
1	1	Spindle complete 2.0	910062		169.9 g
1.1	1	Needle with spindle 2.0	912059	Wear part	
1.2	1	Spindle Nut 2.0	912058		
1.3	1	Clamp Handle 2.0	912057		
1.4	1	Screw	000044		
2	1	Pressure plate 2.0	912053	Wear part	11.8 g
3	1	HP-Seal 2.0	912052	Wear part	1 g
4	1	Valve Body straight 9/16" 2.0 Imp	912069-I	Wear part	1000.9 g
5	1	Conical disc 2.0	912062	Wear part	0.4 g
6	2	Gland Nut 9/16" Imp	709107		14.1 g
7	2	Collar 9/16"	719100		28.9 g

General tolerances ISO 2768-1 mK Designs and drawings created and produced by the contractor are the contractor's intellectual property and may only be used for the purposes of the order. Weight 1.27 kg

Amendment:	Replace for	912020-I, 910200-I
	Replaced by	-
	Drawn	06.09.2016 AM
	Checked	03.05.2017 RB
	Release	29.05.2017 BT
	Index-release	

Hand Valve 2-Way Straight 9/16" 2.0 Imp

Scale 4 : 5

Max 4150 bar / 60,000 psi
Hand Valve 2.0

910210-I

ALLFI AG - RIEDENMATT 1 - CH-6370 STANS
PHONE +41(0)41-618 05 05 - TELEFAX +41(0)41-618 05 10
E-MAIL: sales@allfi.com http://www.allfi.com

Sheet-No. 2
No. of sheets 1